


External Accessories

HGU125/150/250/400/600

Interphase barrier (TQQ)

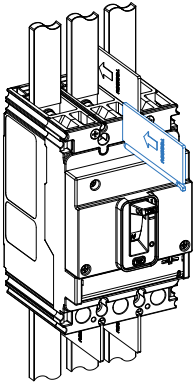

CAUTION

- Before installation, be sure to read the manual carefully to ensure proper operation
- Installation, maintenance and inspection of the circuit breaker should be performed by persons who are qualified for electric work.

Attention

- Avant l'installation, assurez-vous de lire attentivement le manuel afin de garantir un fonctionnement correct.
- L'installation, la maintenance et l'inspection du disjoncteur doivent être effectuées par des personnes qualifiées pour les travaux électriques.

Precaución

- Antes de la instalación, asegúrese de leer cuidadosamente el manual para garantizar un funcionamiento correcto.
- La instalación, el mantenimiento y la inspección del interruptor automático deben ser realizados por personas calificadas para trabajos eléctricos.


Part list / Liste des pièces / Lista de piezas

Type	TQQ12GU	TQQ25GU	TQQ60GU
Applied Model (MCCB)	HGU125	HGU150 HGU250	HGU400 HGU600
	4	-	-
	-	4	-
	-	-	4


Installation / Installation / Instalación

HGU125


- Install an Interphase barrier when mounting a busbar on a 125AF circuit breaker.

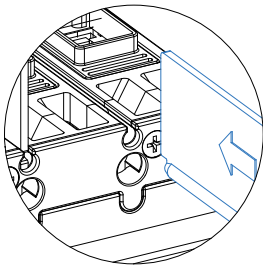

HGU150/250

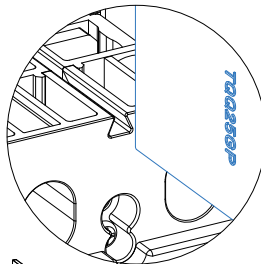

HGU400/600

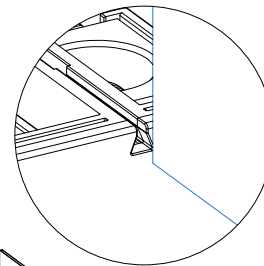

- Make sure the assembly is fully seated to the bottom surface.

